DIGIFLEX® DIGITAL SERVO DRIVES MODEL: DR100EE60A40NAC


FEATURES:

- Fully digital, state-of-the-art design
- Space Vector Modulation and vector control technology
- 20kHz Digital current loop with programmable gain settings
- PIDF velocity loop with 100microsecond update rate
- PID + FF position loop with 100 microsecond update rate
- Hall sensor + encoder or encoder-only based commutation
- Surface-mount technology
- · Small size, low cost, ease of use
- RS232/485 interface for setup and networking
- Windows© based setup software with built-in 8channel digital scope
- Operates in torque, velocity or position mode with programmable gain settings
- Programmable profiling in all modes
- Fully configurable current, voltage, velocity and position limits.
- Step & direction mode for stepper replacement
- Encoder following with programmable gear ratio
- 4 programmable digital inputs
- 2 programmable differential inputs, configurable as step & direction, master encoder, or secondary encoder for dual loop operation
- 4 programmable digital outputs
- 2 programmable analog inputs (10-bit)
- 14-bit reference input or programmable analog input
- 2 programmable analog outputs (10-bit)
- Encoder output (from motor, optionally buffered)
- Off-line 1 or 3-phase 240VAC operation
- Four quadrant regenerative operation
- Integrated shunt regulator and resistor
- Provision for external shunt resistor
- Bi-color LED status indicator
- Extensive built-in protection against:
 - over-voltage (programmable)
 - under-voltage (programmable)
 - short-circuit: phase-phase, phase-ground
 - over-current
 - over-temperature



ADVANCED MOTION CONTROLS DR100EE Series

BLOCK DIAGRAM:

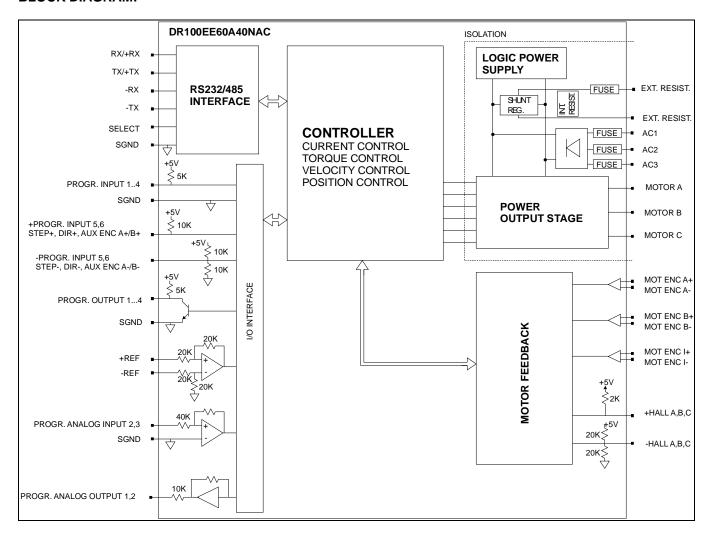

DESCRIPTION:

The DR100EE Series digital PWM servo drives are designed to drive brushed and brushless servomotors. These fully digital drives can operate in torque, velocity, or position mode and employ Space Vector Modulation (SVM), which results in higher bus voltage utilization and reduced heat dissipation. The command source can be generated internally or can be supplied externally. In addition to motor control, these drives feature dedicated and programmable digital and analog inputs and outputs to enhance interfacing with external controllers and devices.

DR100EE Series drives feature a single RS232/485 interface, which is used for drive configuration and setup as well as online operation in networked applications. Drive commissioning can be accomplished through a fully graphical Windows© based application.

All drive and motor parameters are stored in non-volatile memory.

ADVANCED MOTION CONTROLS DR100EE Series

SPECIFICATIONS:

| POWER STAGE SPECIFICATIONS | DR100EE60A40NAC |
|---|--|
| AC SUPPLY VOLTAGE | 40 – 270 VAC, 1 or 3-phase, 50 – 60 Hz |
| PEAK CURRENT | 60A (42.4 Arms) |
| MAXIMUM CONTINUOUS CURRENT | 30A (21.2 Arms) |
| MINIMUM LOAD INDUCTANCE | 600 µH |
| SWITCHING FREQUENCY | 20 kHz |
| HEATSINK (BASEPLATE) TEMPERATURE RANGE | 0 to 65 °C, disables at 65 °C |
| POWER DISSIPATION AT CONTINUOUS CURRENT | 400W |
| MIN. UNDER-VOLTAGE SHUTDOWN | 55 VDC |
| MAX. OVER-VOLTAGE SHUTDOWN | 439 VDC |
| BUS CAPACITANCE | 1650 μF |
| SHUNT RESISTOR | 20Ω, 100W internal |
| SHUNT SWITCH-ON VOLTAGE | Programmable |
| SHUNT FUSE | 5A Motor Delay @ 250VAC |
| AC LINE FUSING | 3 x 20A @ 600VAC |

| MECHANICAL SPECIFICATIONS | | | | | | |
|--|---|--|--|--|--|--|
| AC SUPPLY CONNECTOR: C1 | Screw terminal | | | | | |
| SHUNT AND DC OUT CONNECTOR: C2 | Screw terminal | | | | | |
| MOTOR POWER CONNECTOR: P1 | Screw terminal | | | | | |
| MOTOR FEEDBACK CONNECTOR: CN3* | 15-pin high density female D-sub | | | | | |
| I/O CONNECTOR: CN2* | 26-pin high density female D-sub | | | | | |
| COMMUNICATIONS INTERFACE (RS232/485): CN1* | 9-pin female D-sub | | | | | |
| SIZE | 9.24 x 6.37 x 5.96 inches 234.7 x 161.8 x 151.3 mm | | | | | |
| WEIGHT | | | | | | |

^{*} Mating connectors are not included.

DR100EE Series

PIN FUNCTIONS:

C1 – AC Supply Connector:

| CONNECTOR | PIN | NAME | DESCRIPTION | I/O |
|-----------|-----|----------|---|-----|
| | 1 | AC1 | AC supply input. 40 – 270 VAC, 3-phase. | I |
| C1 | 2 | AC2 | | I |
| | 3 | AC3 | F-13333 | I |
| | 4 | CASE GND | Case ground | GND |
| | 5 | NC | Not connected | - |

C2 - Shunt and DC Out Connector:

| CONNECTOR | PIN | NAME | DESCRIPTION | I/O |
|-----------|-----|------------------|--|------|
| C2 3 4 5 | 1 | HV | DC bus output | 0 |
| | 2 | PGND | DC bus ground | PGND |
| | 3 | EXT. SHT | External shunt resistor | 0 |
| | 4 | EXT SHT. | External shunt resistor | 0 |
| | 5 | INT. SHT. Jumper | Jumper to C2-4 for internal shunt resistor. Remove for external shunt. | - |

P1 - Motor Power Connector:

| CONNECTOR | PIN | NAME | DESCRIPTION | I/O |
|-----------|-----|------|---------------|------|
| | 1 | MA | Motor phase A | 0 |
| | 2 | MB | Motor phase B | 0 |
| P1 | 3 | MC | Motor phase C | 0 |
| | 4 | PGND | DC bus ground | PGND |
| | 5 | HV | DC bus output | 0 |

CN3 - Motor Feedback Connector:

| CONNECTOR | PIN | NAME | DESCRIPTION | I/O |
|-----------|-----|------------|--|-----|
| CN3 | 1 | +Hall A | Commutation sensor inputs. Internal | I |
| | 2 | +Hall B | 2K pull-up to +5VDC. Can be used with single ended or differential Hall sensors. | I |
| | 3 | +Hall C | | I |
| | 4 | MOT ENC A+ | Differential Encoder Input. For single ended encoder signals, leave the A-terminal open. | I |
| | 5 | MOT ENC A- | | I |
| | 6 | MOT ENC B+ | Differential Encoder Input. For single | I |
| | 7 | MOT ENC B- | ended encoder signals, leave the B-terminal open. | I |
| | 8 | MOT ENC I+ | Differential Encoder Input. For single | I |

| | 9 | MOT ENC I- | ended encoder signals, leave the I-terminal open. | ı |
|--|----|------------|---|------|
| | 10 | -Hall A* | See CN3-1. Leave open in case of single ended Hall sensors. | I |
| | 11 | -Hall B* | See CN3-2. Leave open in case of single ended Hall sensors. | 1 |
| | 12 | SGND | Signal ground | SGND |
| | 13 | +5V OUT | +5V @ 250mA max. Short-circuit protected. | 0 |
| | 14 | PAI3 | Programmable analog input, single ended, 10-bit | 1 |
| | 15 | -Hall C* | See CN3-3. Leave open in case of single ended Hall sensors. | I |

^{*} Contact factory for SE compatible options.

CN2 – I/O Connector:

| CONNECTOR | PIN | NAME | DESCRIPTION | I/O |
|-----------|-----|--------------------|--|------|
| CN2 | 1 | PDO1* | Programmable digital output | 0 |
| | 2 | SGND | Signal ground | SGND |
| | 3 | PDO2* | Programmable digital output | 0 |
| | 4 | +REF | Differential reference signal input, 14-bit | I |
| | 5 | -REF | resolution. Can also be used as programmable analog input 1. | I |
| | 6 | PAI2 | Programmable analog input | I |
| | 7 | PAO1 | Programmable analog output | 0 |
| | 8 | PAO2 | Programmable analog output | 0 |
| | 9 | -PDI6 | Programmable Input (see CN2-18) or Direction- or Aux Enc B- | I |
| | 10 | PDO3 | Programmable digital output | 0 |
| | 11 | PDI1 | Programmable digital input | I |
| | 12 | PDI2 | Programmable digital input | I |
| | 13 | PDI3 | Programmable digital input | I |
| | 14 | PDO4 | Programmable digital output | 0 |
| | 15 | +5V OUT | +5VDC. Note: the total current on CN2- 15 and CN3-13 combined should not exceed 250 mA | 0 |
| | 16 | SGND | Signal ground | SGND |
| | 17 | +PDI5 | Programmable differential digital input, or Step+ or Aux Enc A+ | I |
| | 18 | +PDI6 | Programmable, differential digital input or Direction+ or Aux Enc B+ | I |
| | 19 | PDI4 | Programmable digital input | I |
| | 20 | Encoder Channel A+ | Encoder Output (from connector CN3), | 0 |
| | 21 | Encoder Channel A- | not buffered | 0 |
| | 22 | Encoder Channel B+ | Encoder Output (from connector CN3), | 0 |
| | 23 | Encoder Channel B- | not buffered | 0 |

ADVANCED MOTION CONTROLS DR100EE Series

| 24 | Encoder Channel I+ | Encoder Output (from connector CN3), | 0 |
|----|--------------------|--|---|
| 25 | Encoder Channel I- | not buffered | 0 |
| 26 | -PDI5 | Programmable Input (See CN2-17) or Step- or Aux Enc A- | I |

^{*} Contact factory for SE compatible options.

CN1 - Communications Interface (RS232/485):

| CONNECTOR | PIN | NAME | DESCRIPTION | 1/0 |
|-----------|-----|--------|--|------|
| | 1 | SELECT | RS232/485 selection. Pull to ground (CN1-5) for RS485. | I |
| | 2 | TX/+TX | RS232: Transmit; RS485: +TX | 0 |
| | 3 | RX/+RX | RS232: Receive; RS485: +RX | I |
| 4 | 4 | N/C | Not connected | |
| CN1 | 5 | SGND | Signal ground | SGND |
| | 6 | -TX | RS485: -TX | 0 |
| 7 | 7 | N/C | Not connected | |
| | 8 | -RX | RS485: -RX | I |
| | 9 | N/C | Not connected | |

ORDERING INFORMATION:

Standard model: DR100EE60A40NACX X indicates the current revision letter.

MOUNTING DIMENSIONS:

